



SWING BARRIER


Installation Instructions

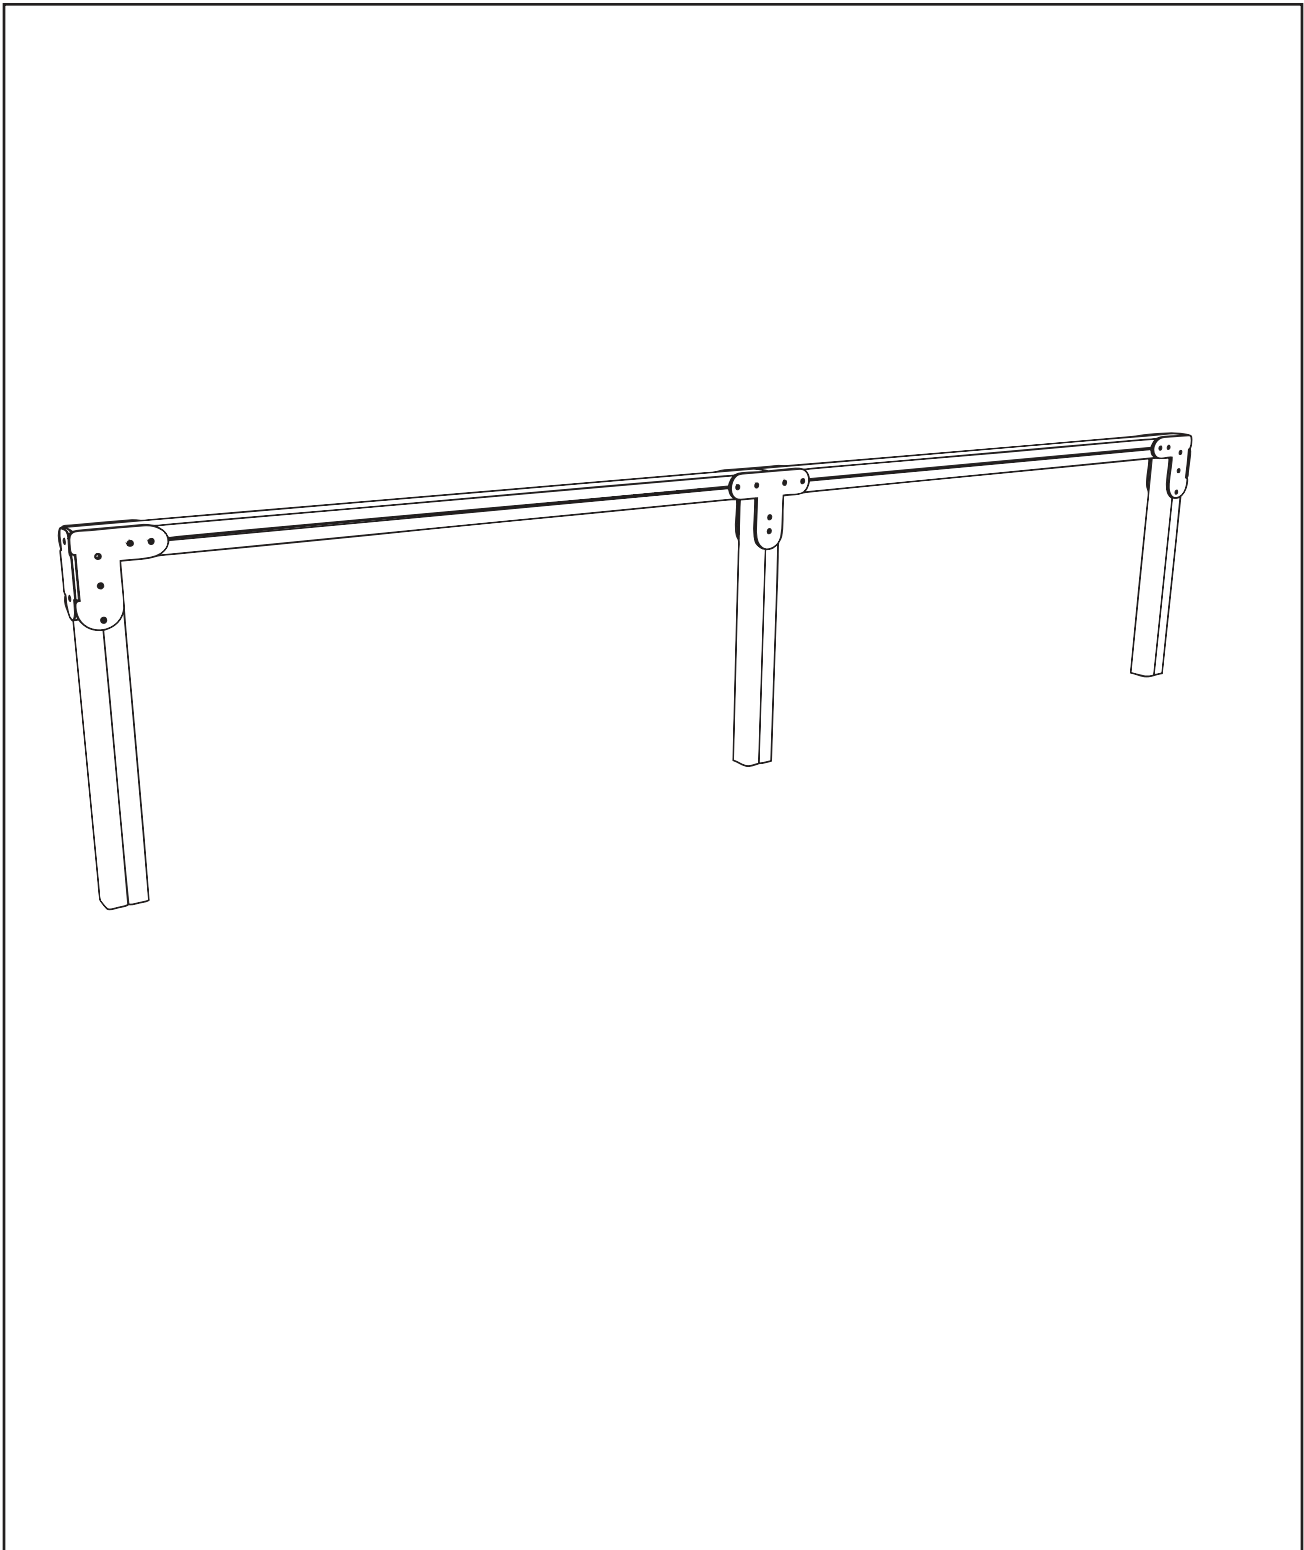

PARTS required

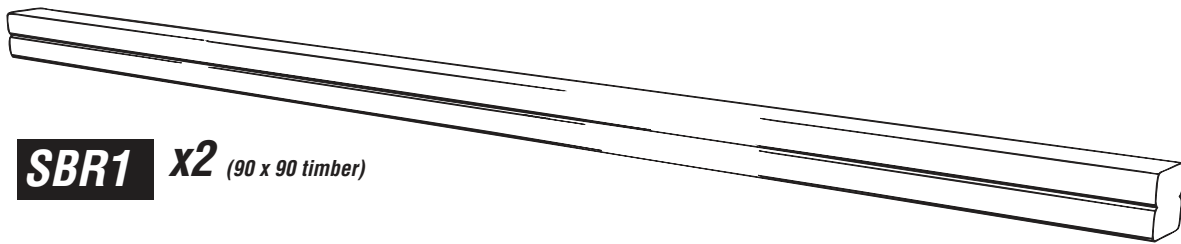


SBR1 x2 (90 x 90 timber)

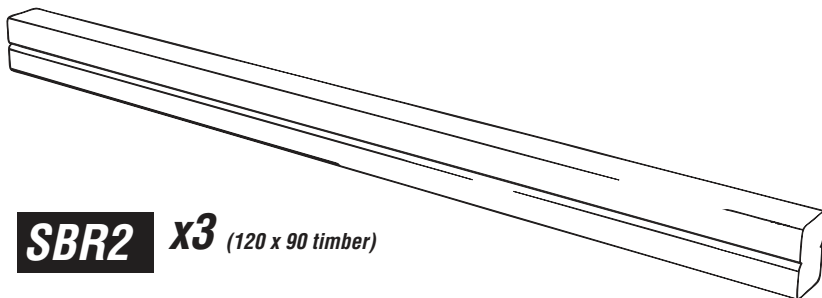

SBR2 x3 (120 x 90 timber)




x32 (FM80 'Brass screws')

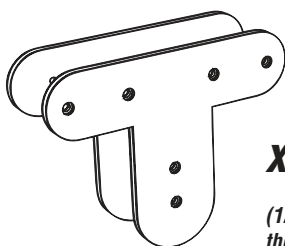

x1 (PAIR)


(120x90 T's SPECIAL - T's from the ROPE WALK)

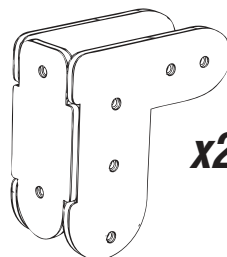



x2 SETS

(120x90 PLAYTEC L's inc BACKS)

TOOLS required

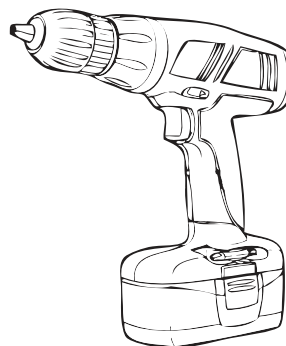

Foundation Details

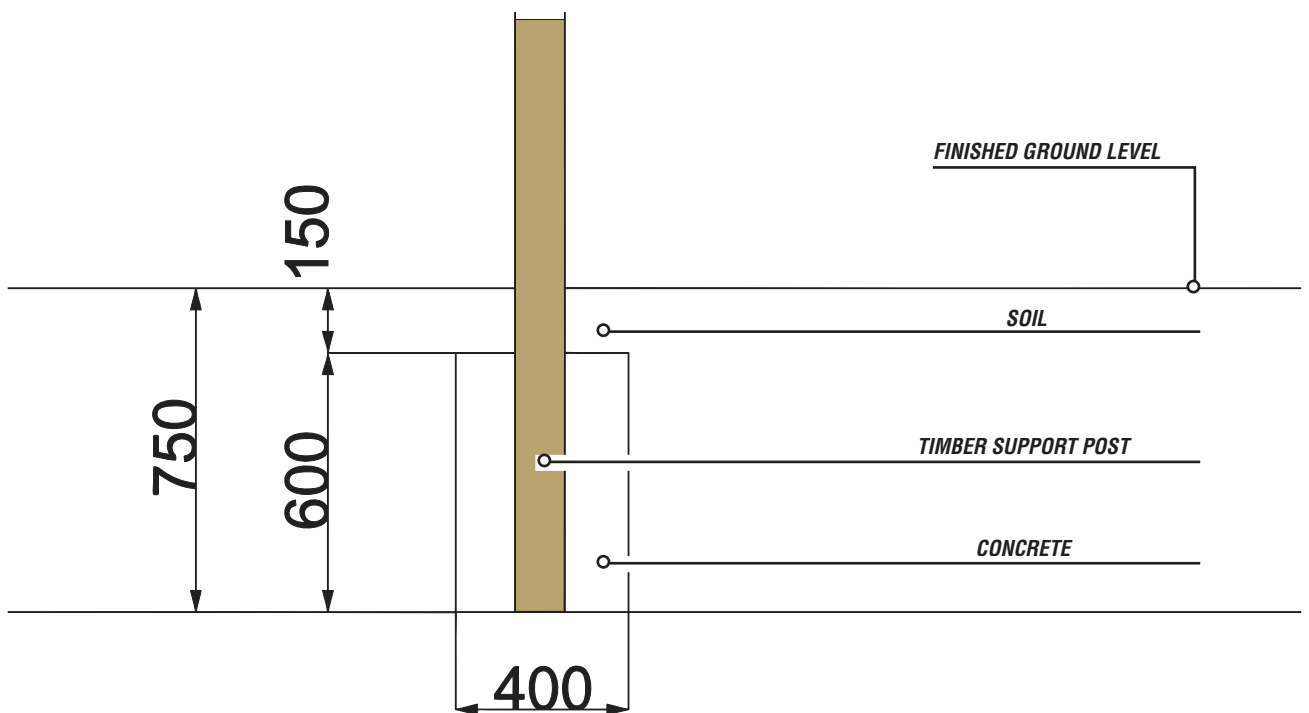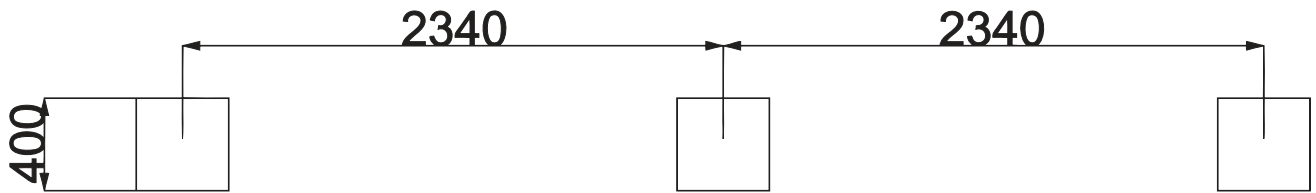


Assembly Instructions

1

Attach 2 x PLAYTEC L's & T's to the SBR1 / SBR2 timbers


Using FM80 'BRASS SCREWS'

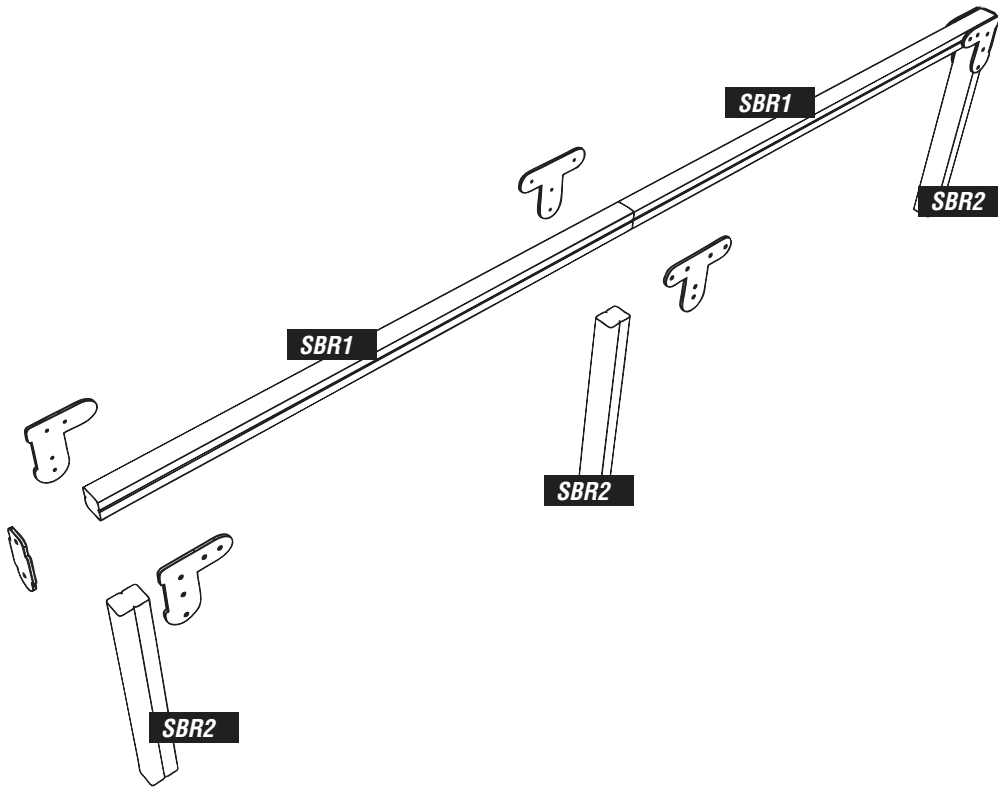

2

Ensure the timbers are POSITIONED as shown below

The SBR1 timbers 'SIT' ONTOP of the SBR2 timbers

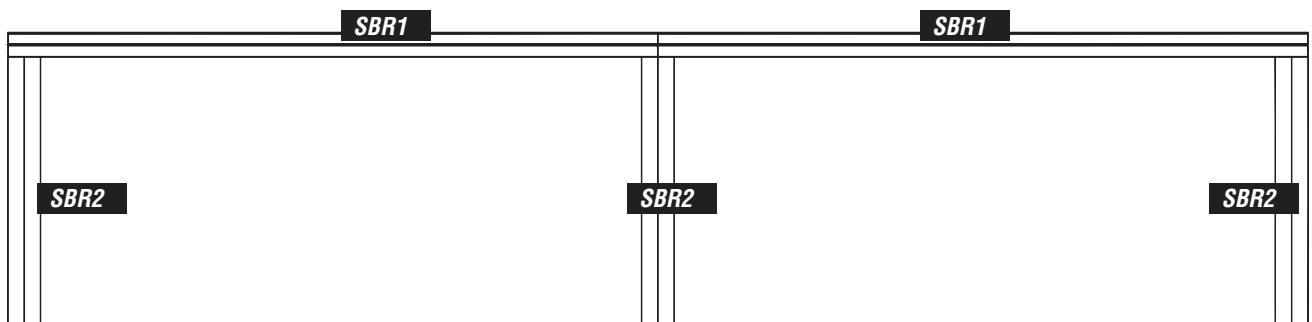

Additional Drawings

