HR120(6) - 6M TRELLIS - HIPPED ROOF
Installation Instructions

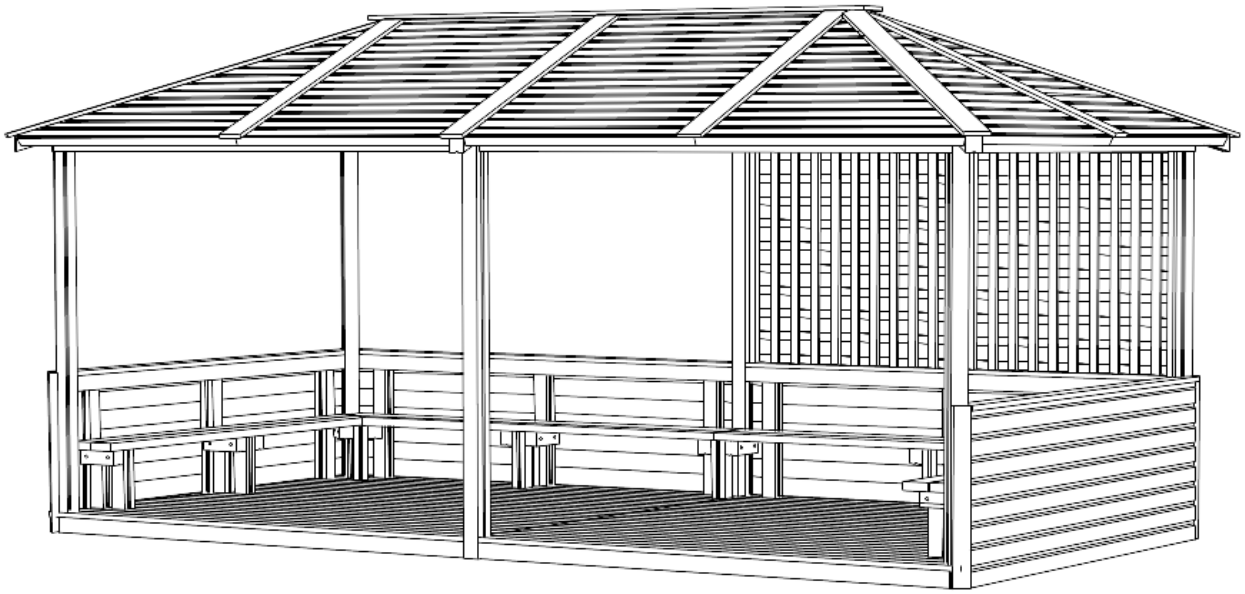

REF: HR120(6) - TRELLIS - 6M HIPPED ROOF

PARTS REQUIRED

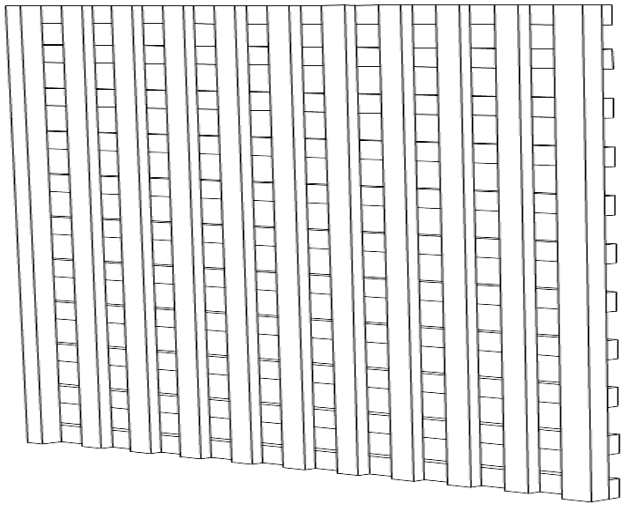

x1

PANEL A (ONE ANGLED EDGE)

x8

M8X120MM

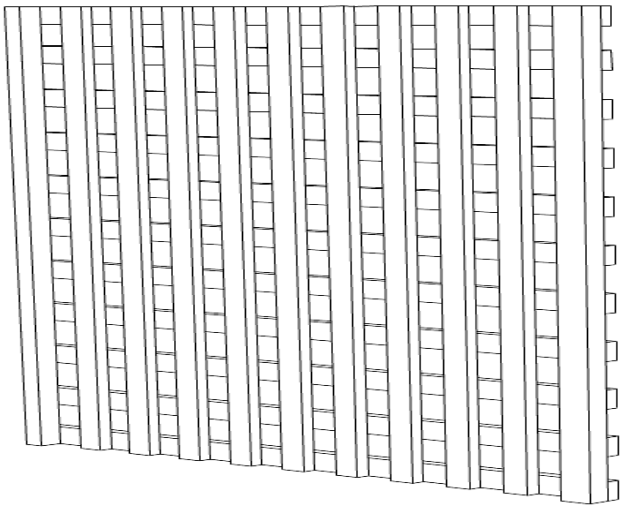

x1

PANEL B (TWO STRAIGHT EDGES)



x20

M8X80MM



x1

TIMBER F (90X90X1270MM)

REF: HR120(6) - 6M TRELLIS - HIPPED ROOF

INSTALLATION INSTRUCTIONS

1 ATTACH PANEL B TO SHELTER AS SHOWN BELOW. SCREW INTO UPRIGHT POST.

USING M8X80MM WOOD SCREWS X5

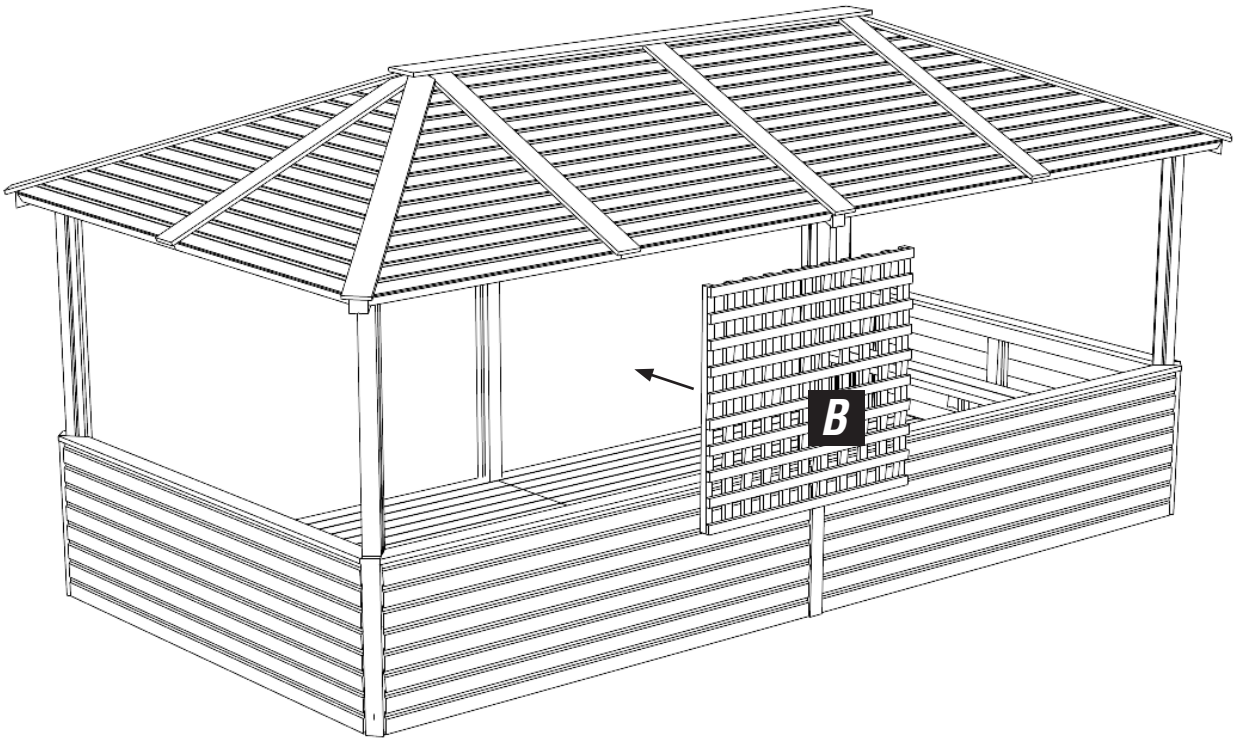

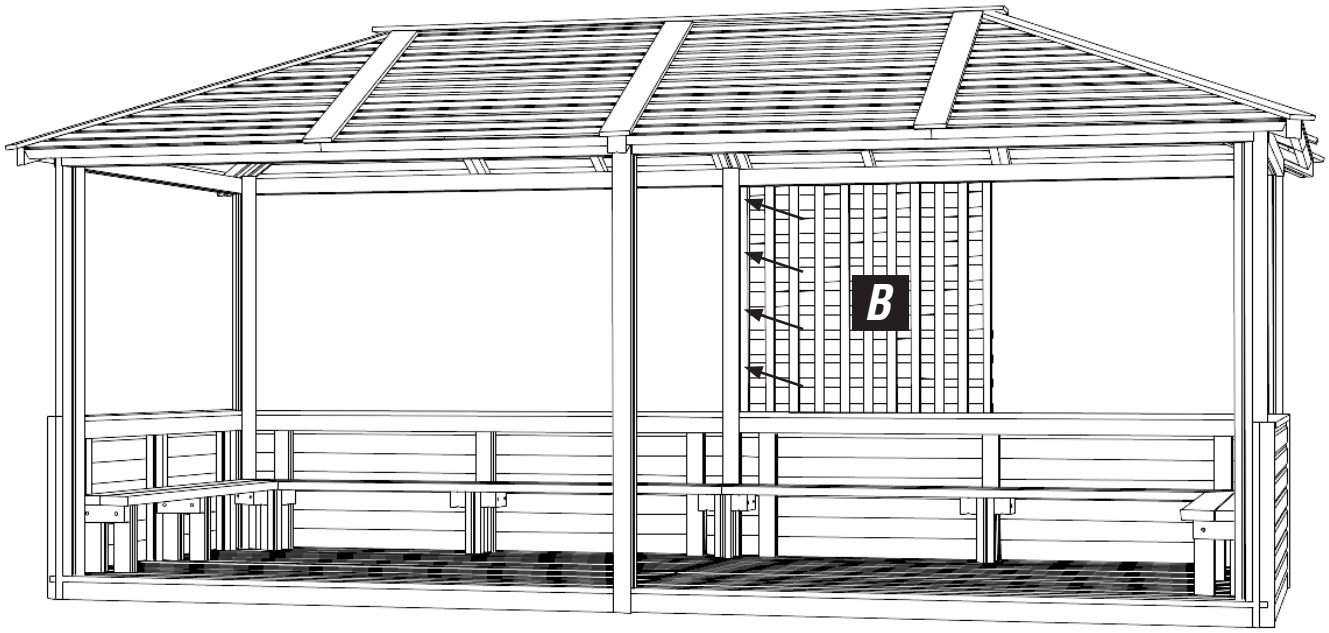

INSTALLATION INSTRUCTIONS

2 ATTACH TIMBER F TO SHELTER AS BELOW. SCREW INTO ROOF AND BOTTOM PANEL.

USING M8X120MM WOOD SCREWS X 8.

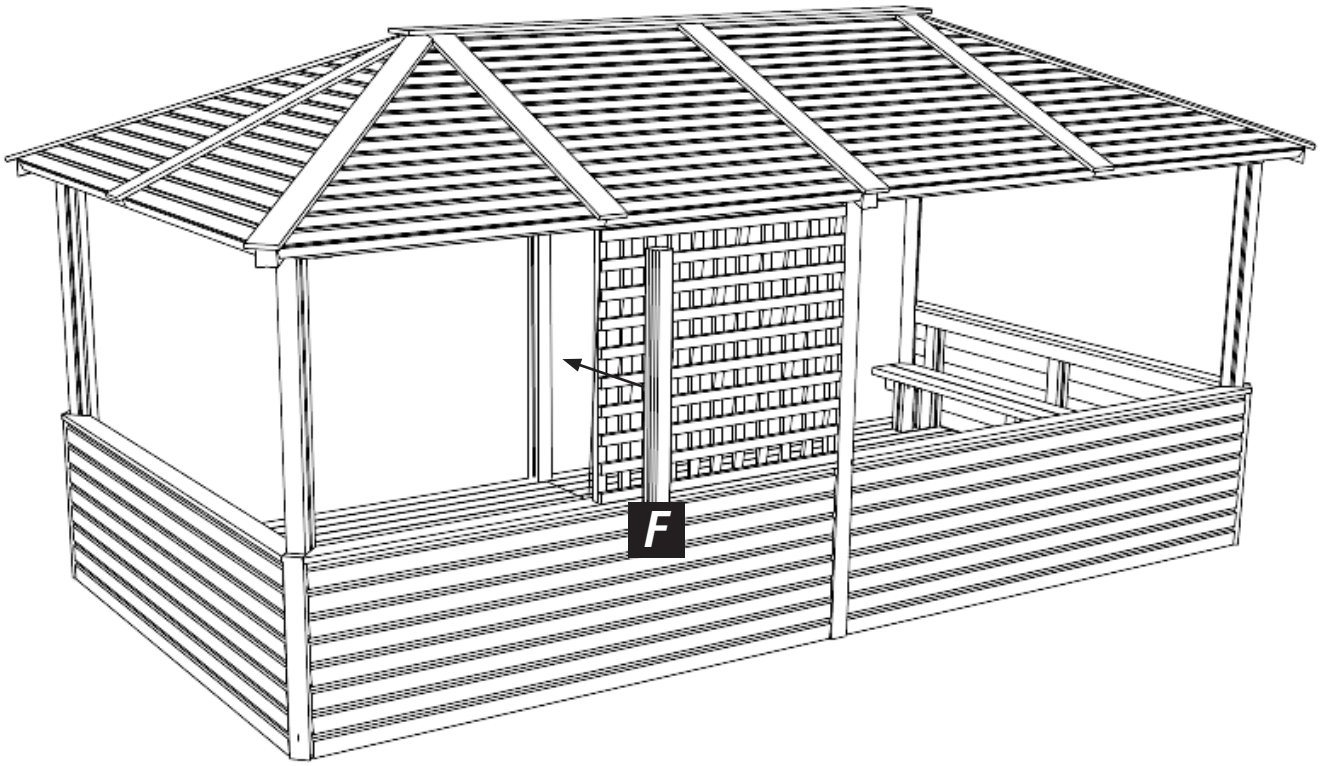

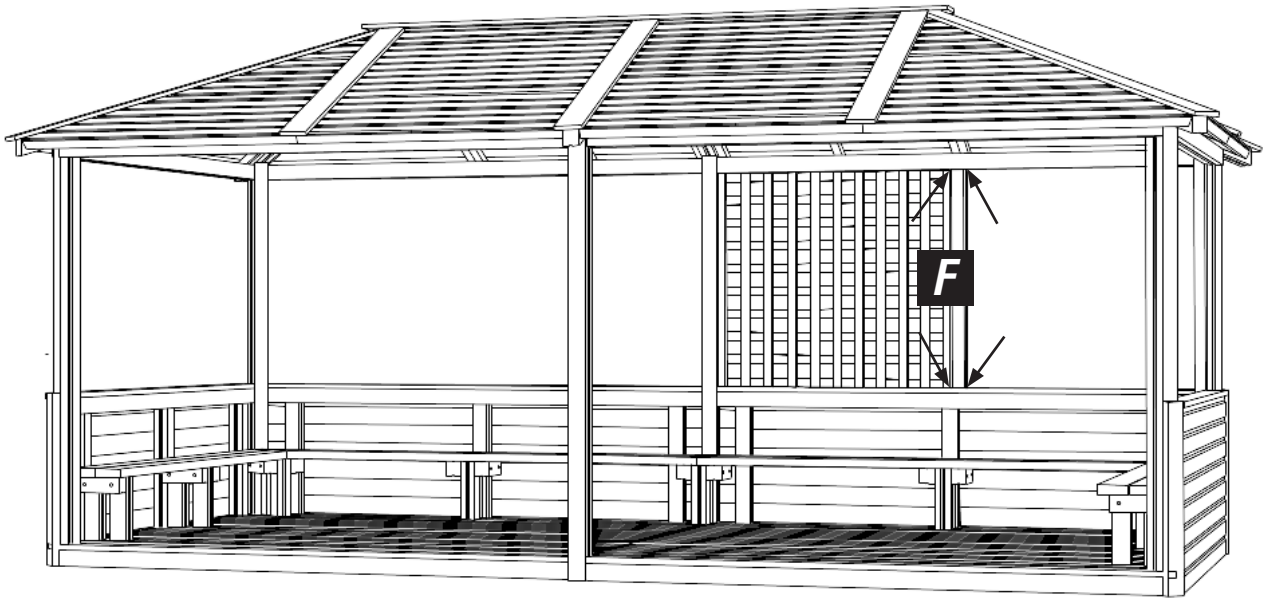

INSTALLATION INSTRUCTIONS

3 ATTACH PANEL A TO SHELTER AS SHOWN BELOW. SECURE BOTH PANELS BY SCREWING INTO UPRIGHT POST AND TIMBER F.
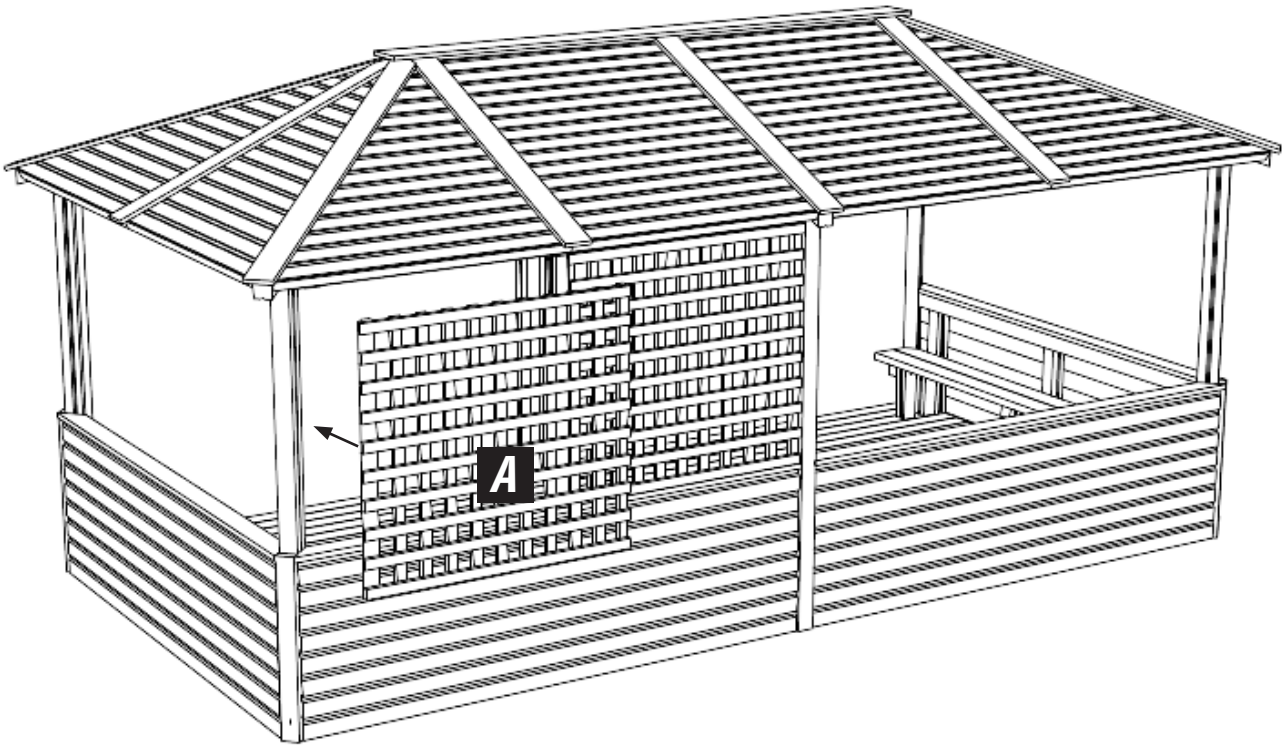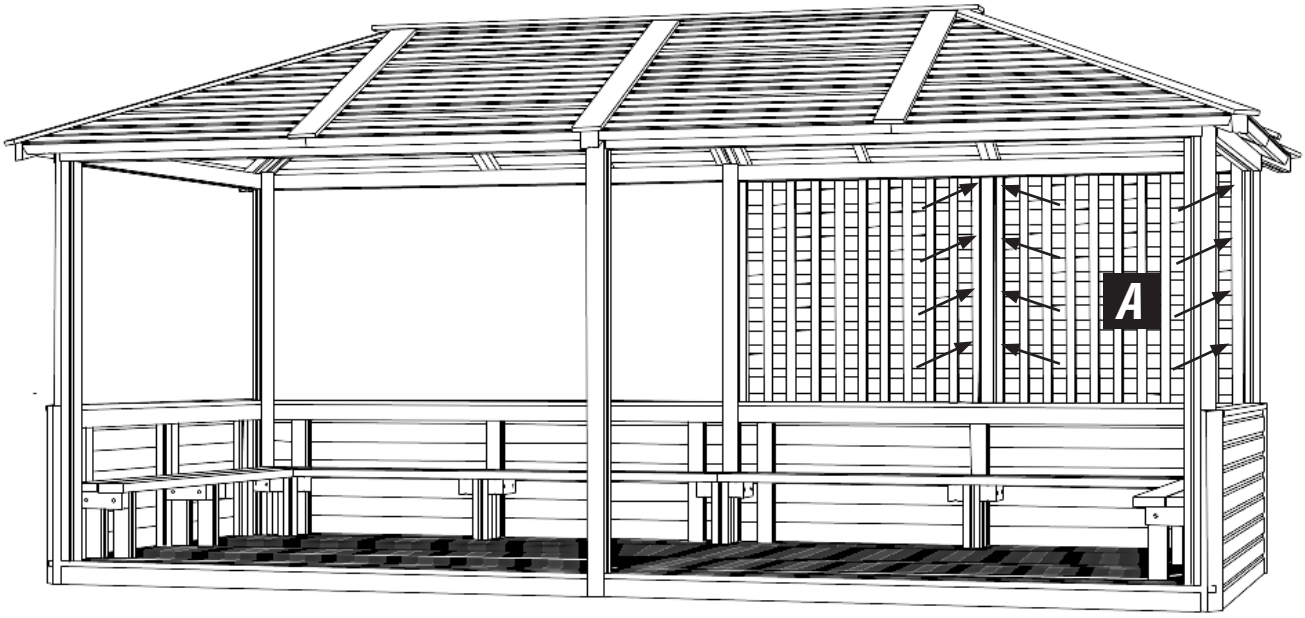
USING M8X80MM WOOD SCREWS X 15.